



# Acoustical Surfaces, Inc.

SOUNDPROOFING, ACOUSTICS, NOISE & VIBRATION CONTROL SPECIALISTS

123 Columbia Court North • Suite 201 • Chaska, MN 55318  
(952) 448-5300 • Fax (952) 448-2613 • (800) 448-0121

Email: [sales@acousticalsurfaces.com](mailto:sales@acousticalsurfaces.com)  
Visit our Website: [www.acousticalsurfaces.com](http://www.acousticalsurfaces.com)

We Identify and **S.T.O.P.** Your Noise Problems

## INSTALLATION INSTRUCTIONS FOR #320C/330C AUTOMATIC DOOR BOTTOM™

1. Cut door bottom 3/16" shorter than distance between door stops. Do not cut anything from end with the the adjustment screw.
2. Mount door bottom with adjustment screw at the hinged side of door and the end of the case tight against the door when door is closed.
3. Loosen adjustment screw to give complete seal when door is closed. Maximum drop 3/4".
4. This door bottom is designed to have the operating bar move sideways about 1/8" to 3/16" toward the swinging end of the door. The extra neoprene at the hinged end of the bar fills space. Do not trim the neoprene.
5. The door bottom drops at the hinged end first so the swinging side of the door can swing freely.
6. Pile insert prevents air passing over the operating bar.
7. Reversible. Fits right or left hand doors.
8. Operate the door several times to ensure that the automatic door bottom is properly adjusted so as not to inhibit the door from self-closing and latching.

**Automatic door bottom sizes: 18" to 24" cannot be trimmed. 36", 42" and 48" can be trimmed up to 3". Other sizes can be trimmed up to 1".**

